

# Upgrading image and ASDM on Cisco Asa 5510

- Upload asa and asdm file to Cisco Asa device via tftp

*copy tftp: disk0:*

*Address or name of remote host [x.x.x.x]? x.x.x.x*

*Source filename [file]? asa822-k8.bin*

*Destination filename [asa822-k8.bin]?*

*Accessing tftp://x.x.x.x/asa822-k8.bin;int=outside...!!!!!!!!!!!!!!!!!!!!!!!!!!!!*

*!!*  
*!!*  
*!!*

*Writing file disk0:/asa822-k8.bin...*

*!!*  
*!!*

*16459776 bytes copied in 1816.200 secs (9063 bytes/sec)*

- set new image for booting

*ciscoasa(config)# boot system disk0:/asa822-k8.bin*

confirm you set everything ok., maybe you will need to change the order

*ciscoasa(config)# show run boot*

*boot system disk0:/asa822-k8.bin*

- save current config

*ciscoasa(config)# wr*

*Building configuration...*

*Cryptochecksum: 6cceedf5 727ea733 8efa0c57 1f994668*

12486 bytes copied in 3.770 secs (4162 bytes/sec)

[OK]

- reload Asa

*ciscoasa(config)# reload*

*Proceed with reload? [confirm]*

*ciscoasa(config)#*

\*\*\*

\*\*\* --- START GRACEFUL SHUTDOWN ---

*Shutting down isakmp*

*Shutting down File system*

\*\*\*

\*\*\* --- SHUTDOWN NOW ---

- upload asdm file to Cisco Asa in the same way as image file.

- set asdm file for using config mode:

*asdm image disk0:/asdm-631.bin*